If you are having issues with printer quality, such as:

- Bands, streaks, splotches, or spots on paper
- }o}μŒ• (U }À ŒοÇ ŒΙU }Œ u]••]vP vŸŒοÇ
- dÆš]8μοšš}CE U}CE‰CE]vš }všvš~•μΖ••Ζ‰••u]•o]Pv

Please try the following maintenance strepsfully alleviate the problem:

- 1. Remove each toner drum and slidger detente cleaning taktorona wire I v (} CE š Z OE}•• š Z cartridge several times
 - a. Be careful not to touch the roller on the bottom of the cartridge or drum
 - b. D}À o v]vPš Iš} (μοš ‰}•]š]}v (}CE £ErojwenŒš]vP cartridge and arrow on tab should line up•
 - c. Guide:

https:/s/upport.brother.com/g/b/faqend.aspx?c=au&lang=en&prod=mfcl3770cdw_us_eu_ase=faq00000208_513

- 2. Rencouideo °@, @ß 1ve a a Æ@ 4)"¢ ÀX Üâ < ! x@pÀH ÀP" ÜX ðÅe 쌜¸ dTa& @rïì» https://disauporcelibitateandmv/aji/tb/f/diajentd.aispix/?c=au&lang=en&p.8 (&)-6.8 (p)-Oipx4. Tap
 - a. Guide:

 $https://support.brother.com/g/b/faqend.aspx?c=au\&lang=en\&prod=mfcl3770cdw_us_en\&prod=mfcl$

<u>=faq00002477_500#uniqu</u>e_635

- 5. TapRegistrationYesand wait for it to finish
 - a. Guide:

https://support.brother.com/g/b/faqend.aspx?c=us_ot&lang=en&prod=hll3290cdw_us&faq0000023_501#unique_639

- 6. Turn the printer off by holding the power buttonwaertsil allowon, switch it off at the wall, wait a count of minutes, and turn it back on
- 7. Try printing some documents
 - a. You may need to print several pages before the issue gradually alleviates

Please also disable firmware auto update, as future updatesentary toner cartridgesuse:

- 1. Turn on the printer and wait for it to finish starting up
- 2. Using the touch screen, tasethings buttowerench and screwdriver
- 3. TapAll Settingis the bottom right
- 4. Scroll down and tap Machine Info
- 5. TapFirmware Auto Cheankd tap Off
- 6. Press theome Buttn to return to the home screen